

## User manual camerasytem VH-1250



### Turning the camera on:

Press the “Zoom tele” button for 2 seconds. The green LED on the camera and the monitor are now ON.

### Turning the camera off:

Press and hold the “Zoom wide” button for 10 seconds. The green LED on the camera and the monitor are now OFF.

### Zoom:

To zoom in use the “Zoom tele” button. To zoom out use the “Zoom wide” button.

### Lens-heating:

To activate the lens-heating press and hold both “Zoom wide” and “Zoom tele” buttons for 5 seconds. The green LED on the camera will now flash slow. After 5 minutes the lens-heating is automatically turned OFF.



### Changing video channels:

There are 7 video channels to be used. To change the video channel use the white UP and DOWN buttons on the receiver.

### Position of the receiver:

For a perfect image and reception, mount the receiver as good as possible in line of sight with the camera.



### Indication of the green LED on the camera:

- LED is ON = camera is on and is working properly
- LED is OFF = camera is turned OFF
- LED flashing quick = low battery voltage
- LED flashing slow = lens-heating is ON