


User manual camerasystem VH-1250

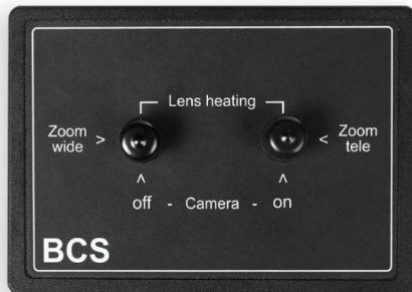

Turning the camera on:

Press the “Zoom tele” button for 2 seconds. The green LED on the camera and the monitor are now ON.

Turning the camera off:

Press and hold the “Zoom wide” button for 10 seconds. The green LED on the camera and the monitor are now OFF.

Pairing the wireless zoom pedal with the monitor:

To wireless pair the zoom pedal with the monitor press and hold the “Learn” button on the back of the monitor, and then press the “Zoom tele” button on the zoom pedal. Now release the button on the back of the monitor. The zoom pedal is now wireless paired with the monitor.

Zoom:

To zoom in, use the “Zoom tele” button. To zoom out, use the “Zoom wide” button.

Lens-heating:

To activate the lens-heating press and hold both “Zoom wide” and “Zoom tele” buttons for 10 seconds. The green LED on the camera will now flash slow. After 5 minutes the lens-heating is automatically turned OFF.



Changing video channels:

There are 7 video channels to be used. To change the video channel use the white UP and DOWN buttons on the receiver.

Position of the receiver:

For a perfect image and reception, mount the receiver as good as possible in line of sight with the camera.

Changing the camera unit ID:

The last 4 digits of the camera's serial number is the camera ID. To change the camera ID in the receiver press and hold the DOWN button until the arrow switches to the second line. Now use the UP and DOWN buttons to change the camera ID to the desired number. When done, wait for 5 seconds until the arrow switched back to the first line.

Important:

The camera system switches off automatically after 10 hours, press “Zoom tele” to switch it on again.

The lens of the camera should be cleaned regularly for an optimal image
Always keep the solar panel free from snow.