

OPERATION MANUAL CAMERASYSTEM VH-3810



The camera system comes with a wireless remote control (VH-5540) and a joystick (VH-9982). In case of application of the joystick, connect the joystick cable to the input bus on the left side of the VH-5540.

In the event of a wireless failure or poor batteries in the wireless remote-control VH-5540 (3 x AAA), the joystick can be connected straight away to the monitor. In this case connect the joystick cable to the "Remote" input at the backside of the monitor.

Set view angle:

- Push the joystick to the left to adjust the camera to the rear (Tilt rear)
- Push the joystick to the right to position the camera forwards (Tilt front)

Set zoom:

- Press the joystick forward to zoom in (Zoom tele)
- Push the joystick back to zoom out (Zoom wide)

Turn on the camerasystem:

- Push the joystick forward to turn the camera on (Zoom tele)

Turn off the camerasystem:

- Push the joystick back 10 seconds to turn the camera off (Zoom wide)

Changing the video channel:

- Press the joystick forward for 15 seconds to change the video channel (15 sec. Zoom tele)