


User manual camerasystem VH-1250

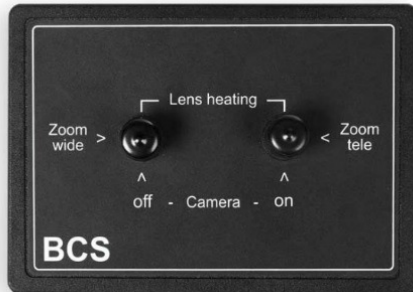

Turning the camera on:

Press the "Zoom tele" button for 2 seconds. The green LED on the camera and the monitor are now ON.

Turning the camera off:

Press and hold the "Zoom wide" button for 10 seconds. The green LED on the camera and the monitor are now OFF.

Zoom:

To zoom in use the "Zoom tele" button. To zoom out use the "Zoom wide" button.

Lens-heating:

To activate the lens-heating press and hold both "Zoom wide" and "Zoom tele" buttons for 5 seconds. The green LED on the camera will now flash slow. After 5 minutes the lens-heating is automatically turned OFF.



Changing video channels:

There are 7 video channels to be used. To change the video channel use the white UP and DOWN buttons on the receiver.

Position of the receiver:

For a perfect image and reception, mount the receiver as good as possible in line of sight with the camera.



Indication of the green LED on the camera:

- LED is ON = camera is on and is working properly
- LED is OFF = camera is turned OFF
- LED flashing quick = low battery voltage
- LED flashing slow = lens-heating is ON

Gebruikershandleiding camerasysteem VH-1250



Het camerasysteem aanzetten:

Druk 2 seconden op de “Zoom tele” knop, de groene LED op de camera gaat nu branden en de monitor gaat aan. Het camerasysteem is nu aan.

Het camerasysteem uitzetten:

Druk 10 seconden op de “Zoom wide” knop, de groene LED van de camera en de monitor gaan uit.

Zoom:

Voor in-zoomen gebruik de “Zoom tele” knop. Voor uit-zoomen gebruik de “Zoom wide” knop.

Lens-verwarming:

Om de lens-verwarming in te schakelen druk beide zoom knoppen tegelijkertijd in voor 5 seconden, op de camera gaat de groene LED langzaam knipperen. De lens-verwarming schakelt automatisch uit na 5 minuten.



Video-kanalen wisselen:

Er zijn 7 video-kanalen beschikbaar. Met de witte op en neer knoppen is er te wisselen tussen deze kanalen in geval van interferentie van andere video-systemen.

Positie van de ontvanger:

Voor de beste ontvangstkwaliteit moet de ontvanger zo goed mogelijk in rechte zichtlijn hangen met de camera.



Indicatie van de groene LED op de camera:

- LED is AAN = camera staat aan en werkt naar behoren
- LED is UIT = camera is uitgeschakeld
- LED knippert snel = accuspanning is laag
- LED knippert langzaam = lens-verwarming ingeschakeld