


## Extended user manual camerasystem VH-1250

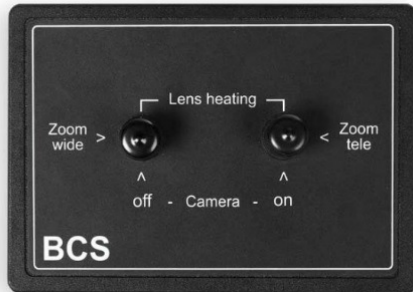

### Turning the camera on:

Press the “Zoom tele” button for 2 seconds. The green LED on the camera and the monitor are now ON.

### Turning the camera off:

Press and hold the “Zoom wide” button for 10 seconds. The green LED on the camera and the monitor are now OFF.

### Pairing the wireless zoom pedal with the monitor:

To wireless pair the zoom pedal with the monitor press and hold the “Learn” button on the back of the monitor, and then press the “Zoom tele” button on the zoom pedal. Now release the button on the back of the monitor. The zoom pedal is now wireless paired with the monitor.

*In case of low battery voltage or interference with other wireless signals the zoom pedal can be connected with the supplied cable. Connect the cable to the back of the zoom pedal and to the back of the monitor in the “Remote” input.*

### Zoom:

To zoom in use the “Zoom tele” button. To zoom out use the “Zoom wide” button.

### Lens-heating:

To activate the lens-heating press and hold both “Zoom wide” and “Zoom tele” buttons for 5 seconds. The green LED on the camera will now flash slow. After 5 minutes the lens-heating is automatically turned OFF.



### Changing video channels:

There are 7 video channels to be used. To change the video channel use the white UP and DOWN buttons on the receiver.

### Position of the receiver:

For a perfect image and reception, mount the receiver as good as possible in line of sight with the camera.

### Changing the camera unit ID:

The last 3 digits of the camera's serial number is the camera ID. To change the camera ID in the receiver press and hold the DOWN button until the arrow switches to the second line. Now use the UP and DOWN buttons to change the camera ID to the desired number. When done, wait for 5 seconds until the arrow switched back to the first line.

### Important:

- The camera system will automatically shut down after 10 hours. Use the “Zoom tele” button on the zoom pedal to turn the camera system back on.
- The battery is charged by the solar panel, no external charging is needed.
- Regularly clean the lens of the camera for a optimal image.
- Always keep the solar panel free from snow.

## Uitgebreide gebruikershandleiding camerasysteem VH-1250



### Het camerasysteem aanzetten:

Druk 2 seconden op de “Zoom tele” knop, de groene LED op de camera gaat nu branden en de monitor gaat aan. Het camerasysteem is nu aan.

### Het camerasysteem uitzetten:

Druk 10 seconden op de “Zoom wide” knop, de groene LED van de camera en de monitor gaan uit.

### Draadloos verbinden van het zoom pedaal:

Om het zoom pedaal draadloos te verbinden met de monitor druk en houdt ingedrukt de “Learn” knop op de achterkant van de monitor, tegelijkertijd druk op de “Zoom tele” knop op het zoom pedaal. Laat nu de “Learn” knop los. Het zoom pedaal is nu draadloos gekoppeld met de monitor.

*In geval van lege batterijen of draadloze interferentie kan het zoom pedaal ook met bijgeleverde kabel aangesloten worden. Sluit deze kabel op de achterkant van het zoom pedaal aan en op de achterkant van de monitor in de “Remote” ingang.*

### Zoom:

Voor in-zoomen gebruik de “Zoom tele” knop. Voor uit-zoomen gebruik de “Zoom wide” knop.

### Lens-verwarming:

Om de lens-verwarming in te schakelen druk beide zoom knoppen tegelijkertijd in voor 5 seconden, op de camera gaat de groene LED langzaam knipperen. De lens-verwarming schakelt automatisch uit na 5 minuten.



### Video-kanalen wisselen:

Er zijn 7 video-kanalen beschikbaar. Met de witte op en neer knoppen is er te wisselen tussen deze kanalen in geval van interferentie van andere video-systemen.

### Positie van de ontvanger:

Voor de beste ontvangstkwaliteit moet de ontvanger zo goed mogelijk in rechte zichtlijn hangen met de camera.

### Het camera unit ID aanpassen in de ontvanger:

De laatste 3 cijfers van het serienummer van de camera is het camera unit ID. Om deze in de ontvanger de wijzigen houdt de onderste witte knop op de ontvanger ingedrukt totdat de pijl verspringt naar de 2e regel. Met de op en neer toetsen kan het camera ID nummer nu gewijzigd worden. Als deze goed staat ingesteld, wacht 5 seconden tot de pijl terug springt naar de 1e regel.

### Belangrijk:

- Het camerasysteem schakelt na 10 uur automatisch uit, druk op “Zoom tele” om het weer in te schakelen.
- **De lens van de camera moet regelmatig schoongemaakt worden voor een optimaal beeld**